

## How to Read Honeywell (Elster) evoQ4 MagMeters

### 6-Digit Honeywell/Elster Protocol Version:

Size	Gallon	Cubic Feet	Cubic Meters
All Sizes	EXPn = +3	EXPn = +2	EXPn = +0

### 8-Digit Sensus Protocol Version:

Size	Gallon	Cubic Feet	Cubic Meters
All Sizes	EXPn = +1	EXPn = +0	EXPn = -1

#### Note:

The evoQ4 LCD Display shows the Meter Reading Across Two (2) Lines. The Large-Font Numbers are the Most-Significant Digits, and the Small-Font Numbers are the Least-Significant Digits.

The Transmitted Reading Will Consist of the Most Significant 6 Digits (Honeywell/Elster Protocol) or 8 Digits (Sensus Protocol) of the Displayed Reading.