




The Signalizer™

Model EMP_{v2} - US Patent No. 11,041,738



Building or Factory Automation Controls

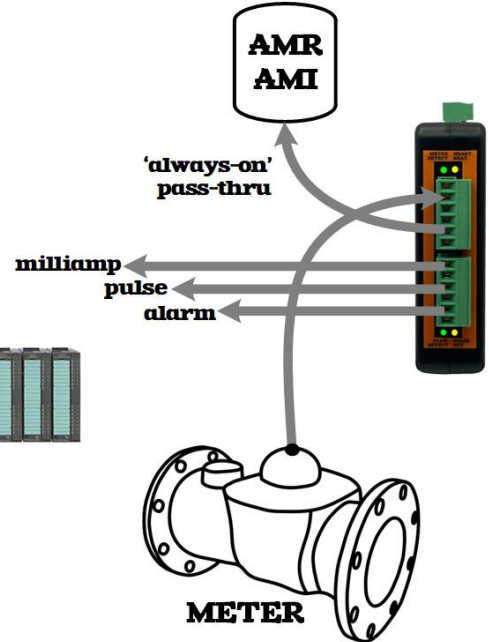

The Versatile 4-20 Milliamp and Pulse Signal Source for Sensus® Water Meters!

SCADAmetrics® is pleased to introduce the newest member of its DINstrumentation™ series – **The Signalizer™!**

This new electronic signal generator for water meters provides a 4-20 milliamp (flow) output and a dry contact pulse (per volume) output! – while still maintaining the meter's ability to be co-connected to an AMI/AMR endpoint!

Meter Owners have traditionally been required to make a weighted buying decision: encoder-type meter?... or milliamp/pulse-type meter? **The Signalizer** allows you to easily have both with the same meter!

The Signalizer utilizes the popular encoder signal from the water meter to generate both a 4-20mA rate-of-flow signal¹ and a dry-contact pulse-per-volume signal. ...And because **The Signalizer** is outfitted with an integral pass-thru port, it can co-exist with an AMI/AMR system². Even if power is removed, the pass-thru port is always functional – ensuring continuous connectivity to the AMR/AMI system!

The Signalizer is compatible with the OMNI, OMNI+, Cordonel, accuSTREAM, iPerl, iPerl+, and ECR registers by Sensus/Xylem (Morrisville, NC).


¹**Encoder Resolution** – a high-fidelity 4-20mA signal requires high-resolution encoder resolution (8+ digits). Therefore, for optimal 4-20mA SIGNALIZER performance, we recommend the Sensus register be pre-programmed to transmit eight (8) or nine (9) totalizer digits..

²**Permitting** – If the meter is owned by the water utility, we recommend that you first contact its engineering department for permission!

Key Features -

- 4-20mA Flow-Proportional Output (3KV Isolation).
- Dry-Contact, Volume-Proportional Output (3.75KV Isolation).
- Dry-Contact Alarm Output (3.75KV Isolation).
- Built-In Pass-Thru Port for Co-Connection to an AMI/AMR System – Works Even If Power Down!
- Compatible with 3-wire version Sensus registers.
- Works with All Popular Registration Units (Gallons, Cubic Feet, Cubic Meters, Acre Feet).
- No Computer Required! – Setup via DIP Switches Only!
- Removable Terminal Blocks, Simplified Wiring Procedures.
- Mounts on standard 35mm industrial DIN-rail.
- 24VDC-Powered (1.5KV Isolation). Low 1.2W Power Consumption.
- Enclosure and Circuit Board: UL 94-V0 recognized materials.
- Simulation-Mode Feature: Emits 12mA and 1 Hz Pulse.
- Integral Common-Mode Rejection Choke

Are you interested in how SCADAmetrics meter technology can help you more closely monitor the flow through your water meters? Give us a call! We'll be glad to discuss the details!

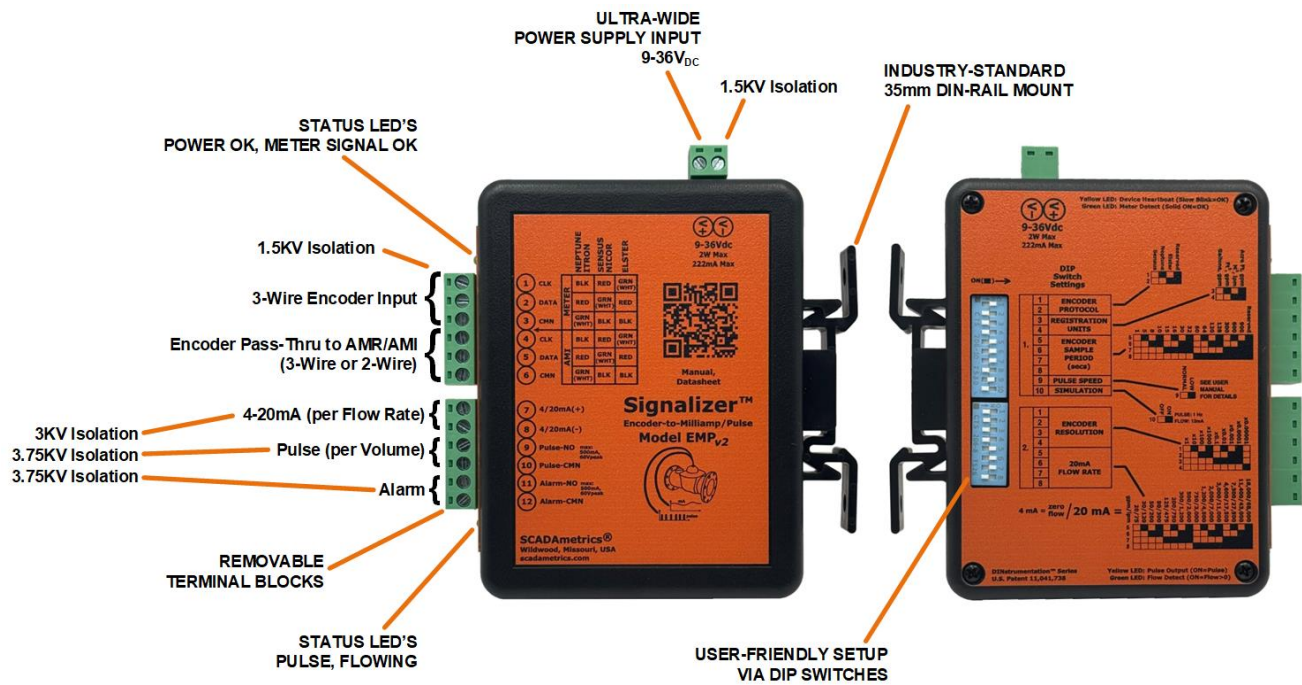

Engineering Specifications -

Dimensions: 4.5" x 5.0" x 1.275"
 Weight: 6.5 Ounces
 Supply Voltage: 9-36V_{DC}
 Supply Power: 1.25W
 Power Supply Isolation: 1500V_{RMS}
 EMI Suppression: EN55032 Class B Chebyshev DC Power Filter, 3-Wire Common-Mode Rejection Choke for Encoder Signal

Neptune Protocol Support: Yes, 8,9-Digit "MACH-10/ProCoder/E-CODER", and 6-Digit "ProRead" Protocols
 Sensus Protocol Support: Yes, Both Fixed and Variable Digit Sensus Protocols (4-9 digits)
 Elster Protocol Support: Yes, Auto-Fills Units and Decimal Shift, Based on Embedded Info within Elster K-Frame
 AMI Pass-Thru Port Support: Universal – Works with All Major-Brand AMI/AMR Endpoints:
 Neptune, Sensus, Aclara, Badger, Metron-Farnier, Itron, Master Meter, Hersey/Mueller, RG3, Zenner, Honeywell, Kamstrup, SCADAmetrics, Touchpads (All), Remote Displays (All)

Supported Units: Gallon, Cubic Feet, Cubic Meters, Acre-Feet
 Supported Scalars: x1, x10, x100, x1,000 --- x0.1, x0.01, x0.001, x0.0001, x0.00001
 Encoder Sample Period (s): 1, 5, 8, 10, 15, 16, 30, 32, 60, 64, 120, 128, 300, 600, 900, Reserved (User-Selectable)
 Programming Method: Integrated DIP Switches, 18-Poles

4-20mA Flow Range (gpm): 20,30,50,80,125,200,300,500,750,1200,2000,3000,4600,7300,11400,18000
 4-20mA Flow Range (lpm): 75,120,200,300,475,750,1200,2000,3000,4500,7000,11000,17500,27500,43000,68000
 4-20mA Resolution: 16-Bit DAC
 4-20mA Isolation: 3000V_{RMS}
 4-20mA Max Series Resistance: 500 Ω
 4-20mA Signal Type: Active. Therefore, do not add an external loop supply, or else damage to the unit will result!

Pulse Output Type: Solid-State Dry-Contact, 1 Pulse-per-Encoder Resolution
 Contact Closure Duration: 50% Duty Cycle or 1000ms – whichever is less
 Alarm Output Type: Solid-State Dry-Contact, Closes if Meter or Signalizer Fault
 Pulse Resolution: Normal-Speed Mode (All Encoders): Pulse Resolution = Encoder Resolution
 Low-Speed Mode (8-Digit Encoders): Pulse Resolution = Encoder Resolution / 10
 Low-Speed Mode (9-Digit Encoders): Pulse Resolution = Encoder Resolution / 100

Closed-Contact Resistance: 0.4 ohm, typical
 Closed-Contact Max Current: 500mA
 Open-Contact Max Voltage: 60V
 Pulse/Alarm Isolation: 3750V_{RMS}

Meter Cable Connection: 3-Position, Removable Screw-Down Terminal Block, 12-26 AWG
 Pass-Thru Cable Connection: 3-Position, Removable Screw-Down Terminal Block, 12-26 AWG
 Pass-Thru Port for AMR/AMI: Yes, Supports both 3-Wire and 2-Wire AMR Devices

Temperature: -40C to 85C (-40°F to 185°F)
 Relative Humidity: 5% to 95%, Non-Condensing
 Enclosure Rating: Built to IP40 Specifications, Not Rated for Submersion/Outdoor Use
 Manufacturing Location: USA
 Environmental: ROHS-Compliant, Lead-Free
 Meter Interface: AWWA C707-05
 Warranty: 2 Years (see www.scadmetrics.com for details)

Engineering Dimensions (Inches) -



Meter Terminal Block Hookup -

Term.	Function	Sensus Meter with Standard Cable	Sensus Meter with Nicor Cable	Sensus Meter with Itron ERT Cable
1	Meter Clock	Red	Red	Black
2	Meter Data	Green	Green	Red
3	Meter Cmn	Black	Black	White Shield

AMR/AMI Terminal Block Hookup -

Term.	Function	Sensus (Metron-Farnier, Badger, Master Meter, Kamstrup, Mueller, Zenner, RG3, Nicor Cable)	Neptune & Itron ERT	Elster Color
4	Utility AMI Clock	Red	Black	White Green
5	Utility AMI Data	Green White	Red	Red
6	Utility AMI Cmn	Black	Green White	Black

Wiring Notes:

1. With the exceptions of Neptune Technology Group and Elster-AMCO (aka Honeywell, ABB, Kent), most meter manufacturers follow the Sensus wire color-coding scheme.
2. Meter Terminal Block Hookup (Terminals 1,2,3): Apply the color-coding that pertains to the manufacturer of the Water Meter (or manufacturer of the Specialty Cable, such as Nicor or Itron).
3. Utility AMI/AMR Terminal Block Hookup (Terminals 4,5,6): Apply the color-coding that pertains to the manufacturer of the AMI/AMR Endpoint (or manufacturer of the Specialty Cable, such as Nicor or Itron).
4. Alternative color-coding: manufacturers occasionally substitute a WHITE wire for a GREEN wire.
5. If the recommended wiring has been attempted, and the display still reports "meter not detected", then re-try using each of the six possible wire color-coding combinations on terminals 1,2,3.

Signal Terminal Block Hookup -

Terminal	Function	Notes
7	4-20mA +	Settable Range via DIP Switches
8	4-20mA -	
9	Pulse +	Solid-State Dry Contact (N-O) 500mA Max, 60V Max
10	Pulse -	
11	Alarm +	Solid-State Dry Contact (N-O) 500mA Max, 60V Max
12	Alarm -	

DIP Switch Setup (Also Imprinted on Device Rear Cover) -



9-36Vdc

2W Max

222mA Max

Yellow LED: Device Heartbeat (Slow Blink=OK)

Green LED: Meter Detect (Solid ON=OK)

ON(■) →

DIP Switch Settings



1.	1	ENCODER PROTOCOL
	2	
	3	REGISTRATION UNITS
	4	
	5	ENCODER SAMPLE PERIOD (secs)
	6	
	7	
	8	
	9	PULSE SPEED
	10	SIMULATION

2.	1	ENCODER RESOLUTION
	2	
	3	
	4	
	5	20mA FLOW RATE
	6	
	7	
	8	

Reserved	Acres Ft, gpm
Elster	M ³ , lpm
Neptune	FT ³ , gpm
Sensus	Gallons, gpm

Reserved	900
1	600
5	300
8	128
10	120
15	64
16	32
30	60
32	60
60	64
64	120
120	128
128	300
300	600
600	900

9	LOW	SEE USER MANUAL FOR DETAILS
9	NORMAL	SEE USER MANUAL FOR DETAILS

10	ON	PULSE: 1 Hz
10	OFF	FLOW: 12mA

1	X0.00001
2	X0.0001
3	X0.001
4	X0.01
1	X0.1
2	X1.000
3	X10.0
4	X100.0
1	X1000
2	X10000
3	X100000
4	X0.00001


$$4 \text{ mA} = \frac{\text{zero flow}}{20 \text{ mA}} =$$

5	18,000/68,000
6	11,400/43,000
7	7,300/27,500
8	4,600/17,500
1	3,000/11,000
2	2,000/7,000
3	1,200/4,500
4	750/3,000
5	500/2,000
6	300/1,200
7	200/750
8	125/475
1	80/300
2	50/200
3	30/120
4	20/75

DINstrumentation™ Series
U.S. Patent 11,041,738

Yellow LED: Pulse Output (ON=Pulse)
Green LED: Flow Detect (ON=Flow>0)

QUICK-START GUIDE -

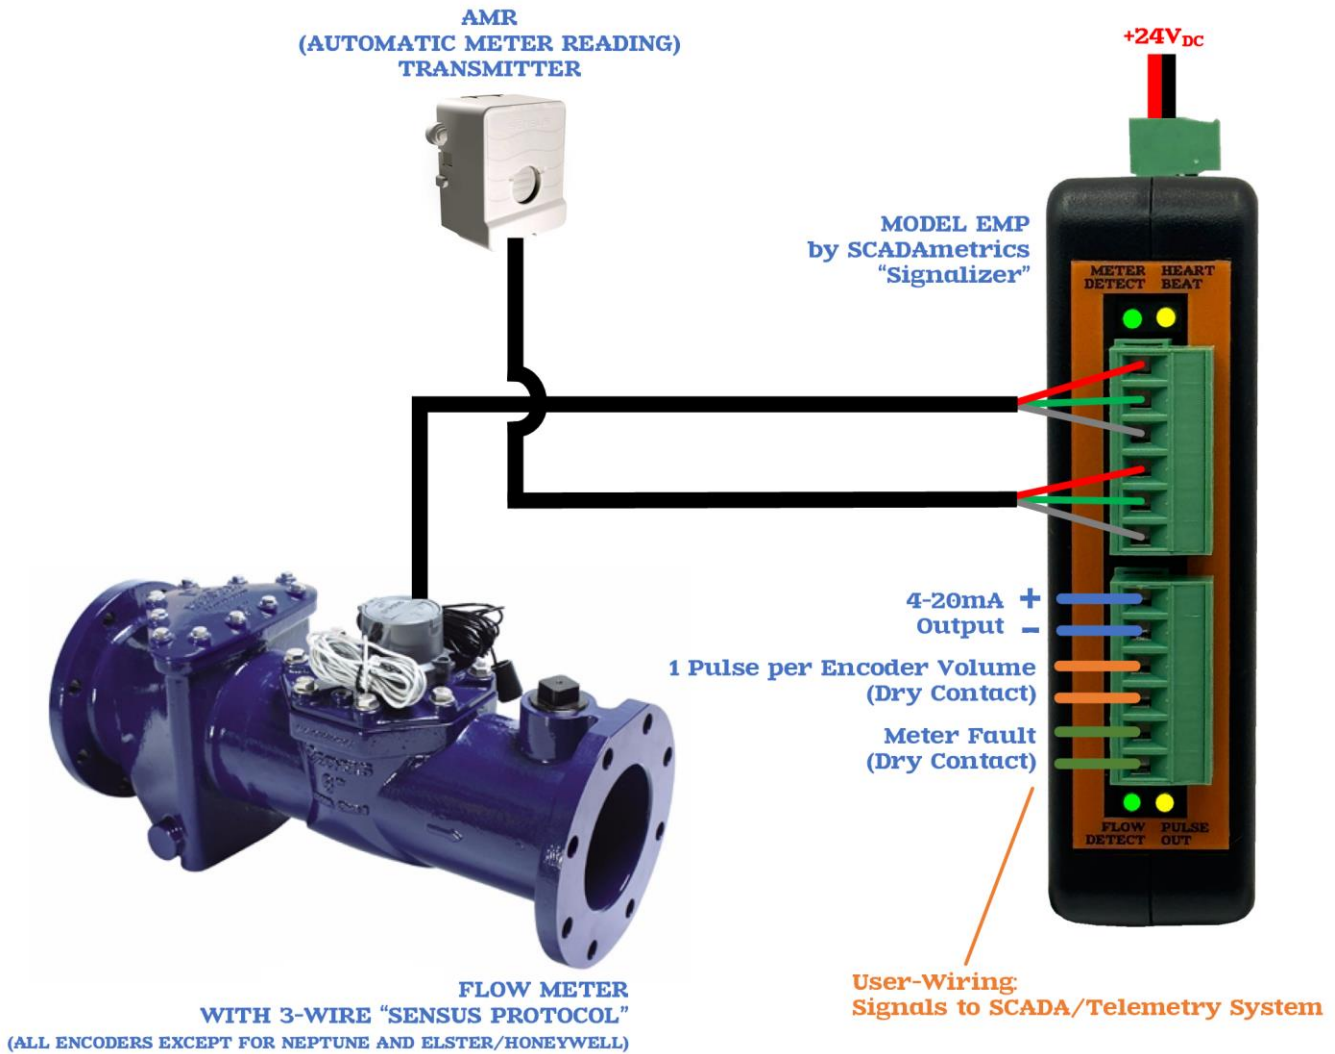

WIRING FOR SENSUS CORDONEL, OMNI-T2/R2/F2/C2, IPERL, ACCUSTREAM, & ECR WATER METERS

Fig1

Initial Setup:




- 1. Attach the water meter's three (3) encoder wires to Signalizer terminals 1,2,3 (see above table for color-coding).**
- 2. (If Applicable) Attach the AMR/AMI endpoint's three (3) encoder wires to Signalizer terminals 4,5,6 (see above table for color-coding).**
- 3. (If Applicable) Connect the 4-20mA output signal to PLC/Controller: Terminals 7(+) and 8(-). Important Note! – The Signalizer™ provides loop power. The user must not add an additional loop power supply, or else damage to the unit will result.**
- 4. (If Applicable) Connect the pulse output signal to the PLC/Controller: Terminals 9 and 10. Important Note! – The pulse output is a solid-state, dry-contact type. 500mA max, 60V max. Circuit must be current-limited by external means.**
- 5. (If Applicable) Connect the alarm output signal to the PLC/Controller: Important Note! – The alarm output is a solid-state, dry-contact type. 500mA max, 60V max. Circuit must be current-limited by external means.**
- 6. Set the DIP Switches, per the Datasheet.**
- 7. Connect DC voltage source to the Signalizer's V+/V- terminals. An isolated 24V_{DC} power supply is recommended.**

Apply Power, and Observe...

- The upper yellow 'Heartbeat' LED should light up YELLOW with an OCCASIONAL BLINK, signifying that the Signalizer is working.
- During bootup, if the meter is detected, the upper green 'Meter OK' LED will blink ON for each detected encoded digit (from 4 to 9 blinks).
- After bootup, the upper green 'Meter OK' LED should light up SOLID GREEN, signifying that the meter has been successfully detected. A fast green blink means "Meter Not Detected".
- The Lower Yellow LED will follow the Pulse Output (LED ON=Contact Closure).
- The Lower Green LED will light up SOLID GREEN during periods when Positive Flow is Detected.

SENSUS WATER METERS -











Recommended **DIP Switches 11 thru 24 FOR PLUS-VERSION 9-DIGIT (SUB-METER) METERS:**

Size	Gallon	Cubic Feet	Cubic Meters	
5/8" iPerl+, accuSTREAM+ SR-II E-Reg+	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.1.10= DipSw.1.11=ON DipSw.1.12= Normal Speed Pulse: 1 Pulse / 0.01 Gal Low Speed Pulse: 1 Pulse / 1 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.1.10=ON DipSw.1.11=ON DipSw.1.12= Normal Speed Pulse: 1 Pulse / 0.001 FT ³ Low Speed Pulse: 1 Pulse / 0.1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2=ON DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.001 M ³ Low Speed Pulse: 1 Pulse / 0.01 M ³	 <p>IPERL+</p>  <p>OMNI+ (use encoded cable, right)</p>  <p>SR-II Plus accuSTREAM Plus</p>
1.5" Omni+ R2/T2/C2/F2 2" Omni+ R2/T2/C2/F2 3" Omni+ T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2=ON DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2=ON DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.001 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³	
4" Omni+ T2/C2/F2 6" Omni+ T2/C2/F2 8" Omni+ T2/C2/F2 10" Omni+ T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 10 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 1 M ³	

For Sub-Meter Applications, The Signalizer Sample Period Is Set To 32 Seconds (DIP Switches 1.5-1.8) In Order to Provide Faster 4-20mA Updates to the SCADA/BMS System.

SENSUS WATER METERS -


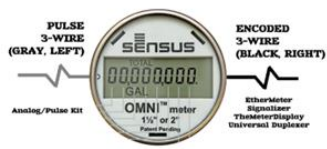



Recommended **DIP Switches 11 thru 24** FOR **8-DIGIT (SUB-METER) METERS:**

Size	Gallon	Cubic Feet	Cubic Meters	
5/8" iPerl, accuSTREAM 3/4" iPerl, accuSTREAM 1" iPerl, accuSTREAM	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 Gal Low Speed Pulse: 1 Pulse / 1 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 FT ³ Low Speed Pulse: 1 Pulse / 0.1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2=ON DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.001 M ³ Low Speed Pulse: 1 Pulse / 0.01 M ³	 <p>IPERL</p>  <p>OMNI (use black cable)</p>  <p>OMNI-PLUS (use encoded cable, right)</p>  <p>HYDROVERSE</p>  <p>ICE</p>  <p>SR-II accuSTREAM</p>
1.5" Omni-R2/T2/C2/F2 2" Omni-R2/T2/C2/F2 3" Omni-T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³	 <p>OMNI-PLUS (use encoded cable, right)</p>  <p>HYDROVERSE</p>
4" Omni-T2/C2/F2 6" Omni-T2/C2/F2 8" Omni-T2/C2/F2 10" Omni-T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 1 FT ³ Low Speed Pulse: 1 Pulse / 10 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 M ³ Low Speed Pulse: 1 Pulse / 1 M ³	 <p>ICE</p>  <p>SR-II accuSTREAM</p>

For Sub-Meter Applications, The Signalizer Sample Period Is Set To 32 Seconds (DIP Switches 1.5-1.8) In Order to Provide Faster 4-20mA Updates to the SCADA/BMS System.

SENSUS WATER METERS for NYC DEP -

Recommended **DIP Switches 11 thru 24 FOR 8-DIGIT (NYC-DEP) METERS:**







Size	Gallon	Cubic Feet	Cubic Meters	
5/8" iPerl, accuSTREAM 3/4" iPerl, accuSTREAM 1" iPerl, accuSTREAM	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 Gal Low Speed Pulse: 1 Pulse / 1 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 FT ³ Low Speed Pulse: 1 Pulse / 0.1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2=ON DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.001 M ³ Low Speed Pulse: 1 Pulse / 0.01 M ³	 <p>IPERL</p>  <p>OMNI (use encoded cable, right (black))</p>
1.5" Omni-R2/T2/C2/F2 2" Omni-R2/T2/C2/F2 3" Omni-T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³	 <p>OMNI-PLUS (use encoded cable, right (black))</p>
4" Omni-T2/C2/F2 6" Omni-T2/C2/F2 8" Omni-T2/C2/F2 10" Omni-T2/C2/F2	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1=ON DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1.1= DipSw.1.2= DipSw.1.3=ON DipSw.1.4= DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3= DipSw.2.4= Normal Speed Pulse: 1 Pulse / 1 FT ³ Low Speed Pulse: 1 Pulse / 10 FT ³	DipSw.1.1= DipSw.1.2= DipSw.1.3= DipSw.1.4=ON DipSw.1.5=ON DipSw.1.6=ON DipSw.1.7=ON DipSw.1.8= DipSw.1.9= DipSw.1.10= DipSw.2.1= DipSw.2.2= DipSw.2.3=ON DipSw.2.4= Normal Speed Pulse: 1 Pulse / 0.1 M ³ Low Speed Pulse: 1 Pulse / 1 M ³	 <p>HYDROVERSE</p>  <p>ICE</p>

For NYC DEP Meter Applications, The Signalizer Sample Period Is Set To 600 Seconds (DIP Switches 1.5-1.8) In Order to Reduce Battery Wear Within the Water Meter.

SENSUS WATER METERS -

Recommended **DIP Switches 2.5-2.8:**

The Following Are *Suggested* Flow Span Settings, and May Need to Be Adjusted Based on Anticipated Max Flow Conditions.

Size	Gallon , Cubic Feet , Cubic Meters	
5/8" iPerl, accuSTREAM 20 gpm 75 lpm	DipSw.2.5= DipSw.2.6= DipSw.2.7= DipSw.2.8=	 IPERL
3/4" iPerl, accuSTREAM 30 gpm 120 lpm	DipSw.2.5=ON DipSw.2.6= DipSw.2.7= DipSw.2.8=	 OMNI (use black cable)
1" iPerl, accuSTREAM 50 gpm 200 lpm	DipSw.2.5= DipSw.2.6=ON DipSw.2.7= DipSw.2.8=	 OMNI-PLUS (use encoded cable, right)
1.5" Omni, HydroVerse, Prop 200 gpm 750 lpm	DipSw.2.5=ON DipSw.2.6= DipSw.2.7=ON DipSw.2.8=	 HYDROVERSE
2" Omni, HydroVerse, Prop 300 gpm 1200 lpm	DipSw.2.5= DipSw.2.6=ON DipSw.2.7=ON DipSw.2.8=	 ICE
3" Omni, HydroVerse, Prop 750 gpm 3000 lpm	DipSw.2.5= DipSw.2.6= DipSw.2.7=ON DipSw.2.8=ON	 SR-II Plus accuSTREAM Plus
4" Omni, HydroVerse, Prop 2000 gpm 7000 lpm	DipSw.2.5= DipSw.2.6=ON DipSw.2.7= DipSw.2.8=ON	
6" Omni, HydroVerse, Prop 3000 gpm 11000 lpm	DipSw.2.5=ON DipSw.2.6=ON DipSw.2.7= DipSw.2.8=ON	
8" Omni, HydroVerse, Prop 4600 gpm 17500 lpm	DipSw.2.5= DipSw.2.6= DipSw.2.7=ON DipSw.2.8=ON	
10" Omni, HydroVerse, Prop 7300 gpm 27500 lpm	DipSw.2.5=ON DipSw.2.6= DipSw.2.7=ON DipSw.2.8=ON	
16" Omni, HydroVerse, Prop 11,400 gpm 43000 lpm	DipSw.2.5= DipSw.2.6=ON DipSw.2.7=ON DipSw.2.8=ON	

4-20mA Span Settings Are Based Solely on Meter Size and Maximum Expected Flow Rates.

FAST-REACTION BATCHING METER APPLICATIONS -

- (a) Fast-Reaction Batch Control Meter Applications require ultra-fast pulse output reaction time: ~1 sec.

CAUTION! – Please ensure that the connected encoder-type flow meter can tolerate ultra-short sample periods. (i.e. Make sure there are no water meter register battery issues!)

Examples of Meter Registers that do not contain a battery, or otherwise can tolerate ultra-short sample periods:

- Sensus ICE/ECR

Fast Reaction Time DIP Switch Settings:

[1.5 , 1.6 , 1.7 , 1.8] = [OFF , OFF , OFF , OFF]