



Analog Pulse Kit

Model APK


Building or Factory
Automation Controls



2 YEAR
WARRANTY



milliamp
pulse
flow switch

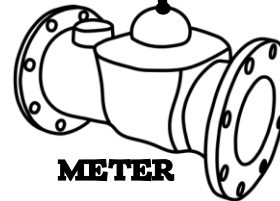

METER

Provides 4-20 Milliamp Flow Rate and Pulse-per-Volume Meter Signals to SCADA, Telemetry, and Building Automation Systems!

SCADAMETRICS® is pleased to introduce a new member to its DINstrumentation™ series – **Analog Pulse Kit!**

This new electronic signal generator for water meters provides a 4-20 milliamp (flow) output, a dry contact pulse (per volume) output, and a dry contact flow switch output!

Certain flow meters, such as the Sensus® Cordonel®, OMNI™-series, and HydroVerse, feature a digital pulse output signal. The SCADAMETRICS **Analog Pulse Kit** was designed to expand upon this signal to provide an efficient flow meter interface to SCADA, Telemetry, and Building Automation Systems.

Furthermore, the **Analog Pulse Kit** was designed using SCADAMETRICS' signature approach of providing users with the capability to easily set the instrument's meter-specific behavior in-the-field, as opposed to only at the factory. All meter-specific customization is accomplished using 16 integrated DIP-switches, which are set according to our lookup table. The obvious benefits to our approach are accelerated project schedules and shortened lead-times.

The **Analog Pulse Kit** utilizes the digital pulse output from the water meter to generate a 4-20mA rate-of-flow signal and a secondary dry-contact pulse-per-volume signal. It also generates a dry-contact flow switch signal, which can be used, for example, to trigger ON/OFF a chemical disinfection pump.

For pulse output meters that feature a dry-contact, open-collector, or open-drain output, the Analog Pulse Kit offers a standard 2-wire pulse input interface.

For Sensus® Cordonel®, OMNI™, HydroVerse, HET Propeller, and W-Series Turbo Meters, the **Analog Pulse Kit** provides the necessary 24V_{DC} auxiliary power supply for these unique meters.

For flow meters whose pulse output signal is too short-duration (milliseconds) or too high-frequency (Hz) to be detected by certain low-pulse-bandwidth BMS systems, the **Analog Pulse Kit** provides a **Pulse Extension** feature, which lengthens the duration of each output pulse to at least 100 milliseconds; and the **Analog Pulse Kit** also provides a **Low-Speed Pulse Output** feature, which decreases the pulse output frequency (Hz) by a factor of 10.


Key Features -

- 4-20mA Flow-Proportional Output (3KV Isolation).
- Dry-Contact, Volume-Proportional Output (3.75KV Isolation).
- Dry-Contact Flow-Switch Output (3.75KV Isolation).
- Compatible with Most Late-Model, Pulse-Type Flow Meters.
- Works with All Popular Registration Units (Gallons, Cubic Feet, Cubic Meters, Acre Feet).
- No Computer Required! – Setup via DIP Switches Only!
- Removable Terminal Blocks, Simplified Wiring Procedures.
- Mounts on standard 35mm industrial DIN-rail.
- 24VDC-Powered (1.5KV Isolation). Low 1.2W Power Consumption.
- Enclosure and Circuit Board: UL 94-V0 recognized materials.
- Simulation-Mode Feature: Emits 12mA and 1 Hz Pulse.

Are you interested in how SCADAMETRICS meter technology can help you more closely monitor the flow through your water meters? Give us a call! We'll be glad to discuss the details!

SCADAMETRICS
scadametrics.com
Wildwood, Missouri USA
636.405.7101

Engineering Dimensions (Inches) -

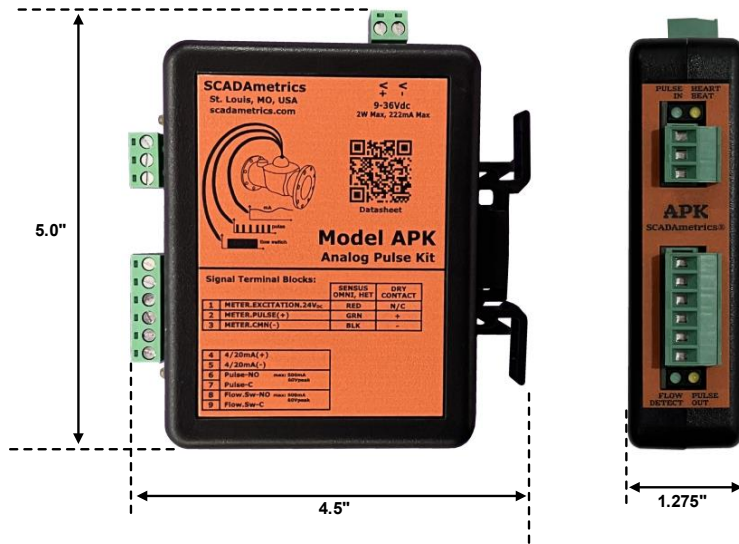

Meter Terminal Block Hookup (Table.1) -

Terminal	Function	Sensus® Cordonel®, OMNI™, HET Prop, W-Series Turbo	Dry-Contact Pulse Input or Transistor Pulse Input or Sensus® HydroVerse
1	Excitation Power (+24V _{DC})	Red	No Connection!
2	Pulse Input (+)	Green	Pulse (+)
3	Pulse Input (-)	Black	Pulse (-)

Wiring Notes:

- Terminal #1 is a 24V_{DC} Excitation Power Supply, which is provided as a convenience for Sensus® Cordonel®, OMNI™, HET Propeller, and W-Series Turbo Water Meters only.
- Non-Sensus® Water Meters and the Sensus HydroVerse should connect to Terminals #2 and #3 only.


Signal Terminal Block Hookup (Table.2) -

Terminal	Function	Notes
4	4-20mA +	Settable Range via DIP Switches
5	4-20mA -	
6	Pulse +	Solid-State Dry Contact (N-O) 500mA Max, 60V Max
7	Pulse -	
8	Flow Switch +	Solid-State Dry Contact (N-O) 500mA Max, 60V Max
9	Flow Switch -	

QUICK-START GUIDE -

SENSUS® CORDONEL® WIRING


Fig1

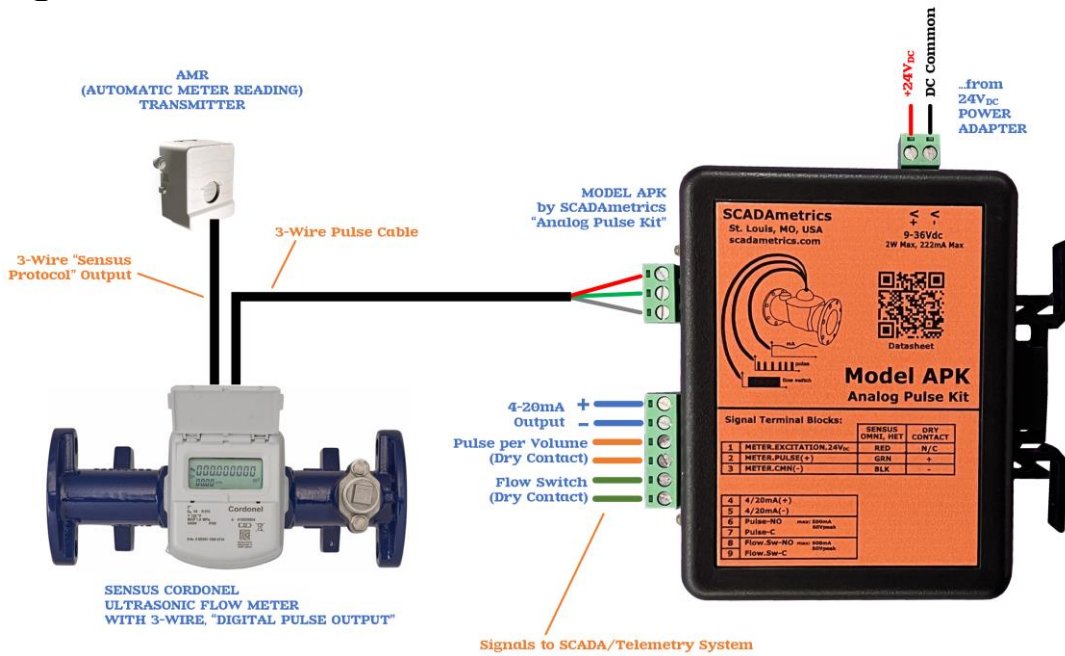

Sensus Cordonel FieldLogic Configuration Tool (Android/Tablet):

1. Purchase/Acquire Compatible Cordonel Communication Cable Must be Dual-Output Type. Highlighted in Green Below.

B	8	Communication Cables
	1	6' TR/PL cable (3-wire)
	2	20' TR/PL cable (3-wire)
	3	50' TR/PL cable (3-wire)
	4	100' TR/PL cable (3-wire)
	5	Iron connector with 5' cable
	6	Iron connector with 25' cable
	7	5' Nicor AMR cable (male connector)
	8	20' Nicor AMR cable (male connector)
	9	50' Nicor AMR cable (male connector)
x	A	6' TR/PL cable (3-wire) & 20' Pulse cable
x	B	20' TR/PL cable (3-wire) & 20' Pulse cable
x	C	50' TR/PL cable (3-wire) & 20' Pulse cable
x	D	100' TR/PL cable (3-wire) & 20' Pulse cable
x	E	Iron connector with 5' cable & 20' Pulse cable
x	F	Iron connector with 25' cable & 20' Pulse cable
	G	18' Nicor AMR cable (female connector) & 18' Nicor pulse cable (male connector)
x	H	5' Nicor AMR cable (male connector) & 20' Pulse cable
x	J	20' Nicor AMR cable (male connector) & 20' Pulse cable
x	K	50' Nicor AMR cable (male connector) & 20' Pulse cable

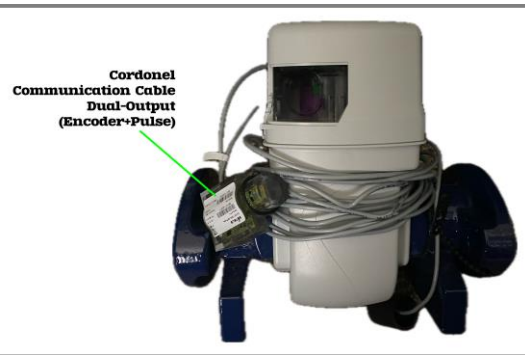


2. Insert/Attach Communication Cable to Cordonel
3. Enable Pulse Output using FieldLogic Tool
4. The Default Pulse Width of the Cordonel is 20ms. This is OK as-is.
5. Set Pulses per Unit Volume using FieldLogic Tool, According to the Following Table:

Cordonel Diameter	US Gal Pulse Weight	FT ³ Pulse Weight	M ³ Pulse Weight	AF Pulse Weight
1.5" – 2"	1 USG	0.1 FT ³	0.001 M ³	0.00001 AF not max resolution
3"	1 USG	0.1 FT ³ extended mode	0.01 M ³	0.00001 AF not max resolution
4"	10 USG	0.1 FT ³ extended mode	0.01 M ³	0.00001 AF not max resolution
6"	10 USG	1 FT ³	0.01 M ³	0.00001 AF not max resolution
8" – 12"	10 USG	1 FT ³	0.01 M ³	0.00001 AF

SENSUS® OMNI® WIRING

Fig.2

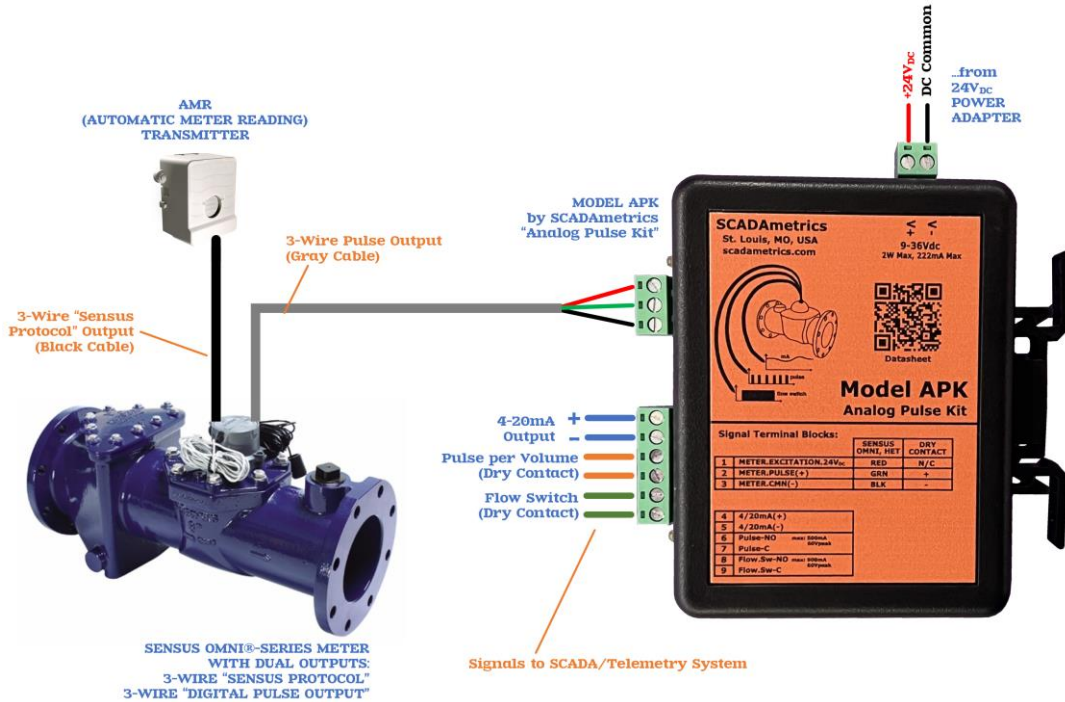

Sensus FieldLogic Configuration Tool (Android/Tablet):

1. Omni-T2/C2/F2 register will always feature the necessary dual-output cables.
2. For Omni-Plus register, Purchase/Acquire Compatible Dual-output Communication Cables
3. **ALWAYS USE THE SENSUS 3-WIRE PULSE CABLE!! ... DO NOT USE THE SENSUS 3-WIRE ENCODED CABLE!!**
4. Sensus Omni or Omni-Plus register should be programmed using Sensus FieldLogic Tool, according to the following tables:


SCADAmetrics Recommendations: Sensus Omni-Series Pulse Weight:

Omni Diameter	US Gal Pulse Weight	FT ³ Pulse Weight	M ³ Pulse Weight	AF Pulse Weight
1.5" - 3"	1 USG	0.1 FT ³	0.001 M ³	0.00001 AF
4" - 12"	10 USG	1 FT ³	0.01 M ³	0.0001 AF




SCADAmetrics Recommendations: Sensus Omni-Plus Series Pulse Weight:

Omni Diameter	US Gal Pulse Weight	FT ³ Pulse Weight	M ³ Pulse Weight	AF Pulse Weight
1.5" - 4"	1 USG	0.1 FT ³	0.001 M ³	0.00001 AF
6" - 12"	10 USG	1 FT ³	0.01 M ³	0.0001 AF

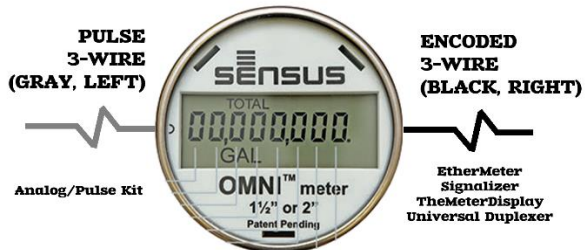

SENSUS® HYDROVERSE® WIRING

Fig.3

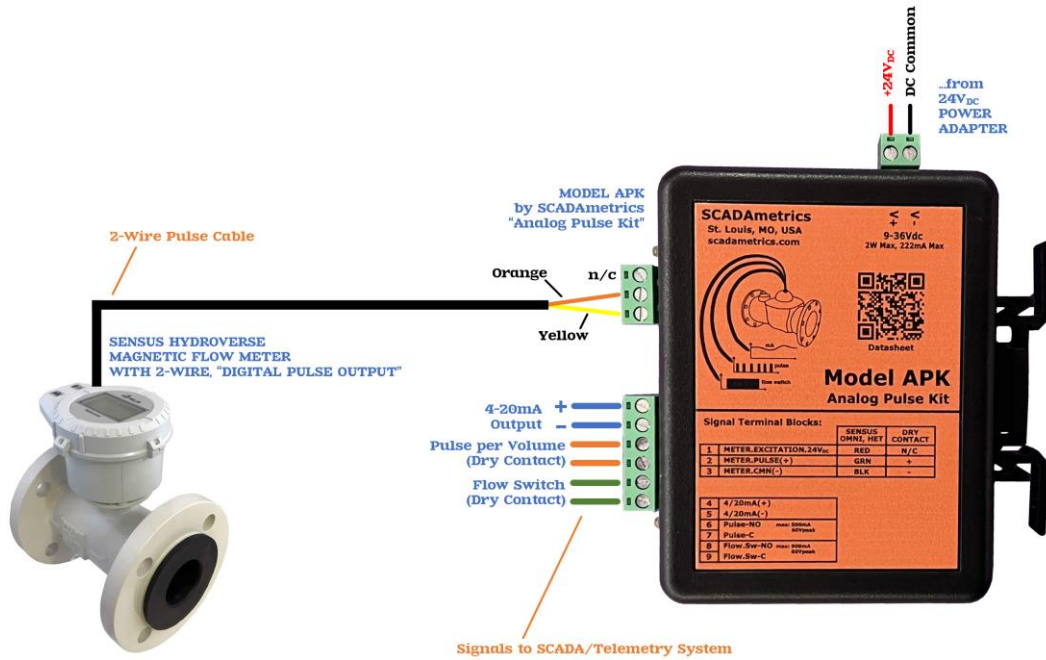

Sensus FieldLogic Configuration Tool (Android/Tablet):

- Sensus HydroVerse register should be programmed using Sensus FieldLogic Tool, according to the following tables:

SCADAmetrics Recommendations: Sensus HydroVerse Pulse Weight:


HydroVerse Diameter	US Gal Pulse Weight	FT ³ Pulse Weight	M ³ Pulse Weight	AF Pulse Weight
1.5" – 4"	1 USG	0.1 FT ³	0.001 M ³	0.00001 AF
6" – 8"	10 USG	1 FT ³	0.01 M ³	0.0001 AF
10" – 24"	100 USG	10 FT ³	0.1 M ³	0.001 AF

- Set Pulse Width: 20ms (HydroVerse default is 2ms).


HydroVerse Wiring Color Codes:

ORANGE = Forward Pulse
RED = Reverse Pulse
BROWN = Alarm Output
YELLOW = Pulse & Alarm Common

For APK and APK.PLUS applications, only two wires should be connected to the APK/APK.PLUS: ORANGE and YELLOW. There is no 24VDC excitation required.

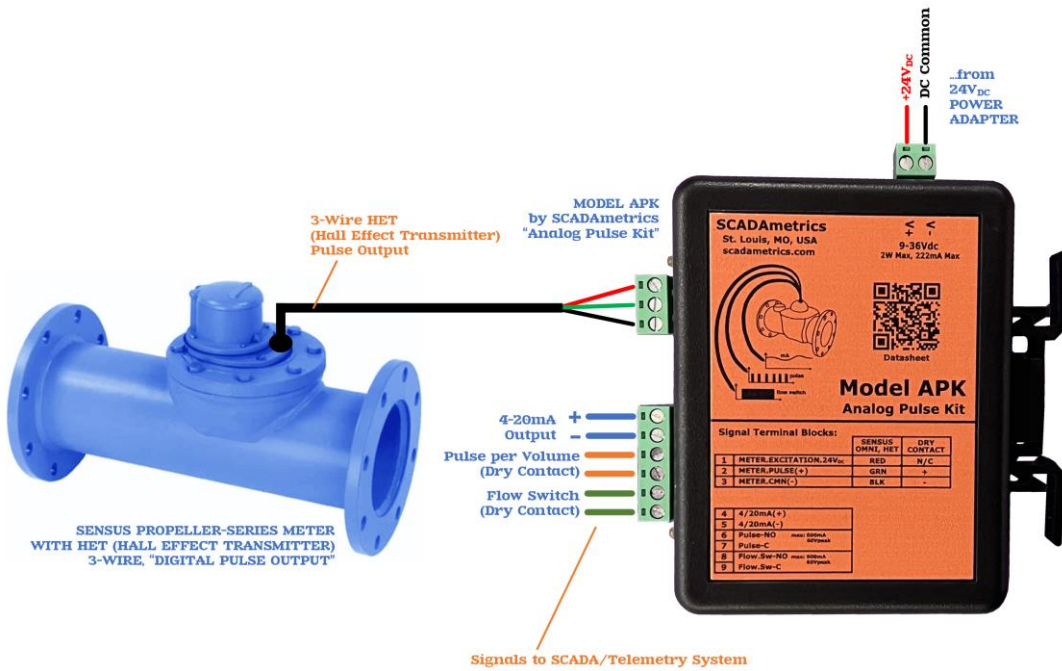

**SENSUS®
HET/
PROPELLER
WIRING
Fig2**

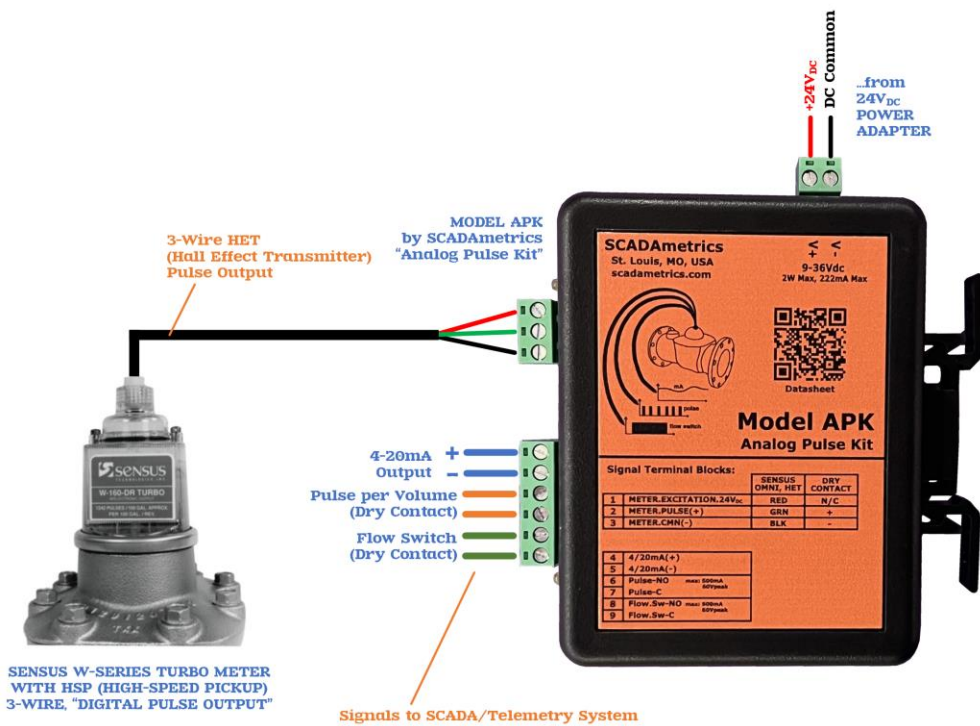

**SENSUS® W-
SERIES
TURBO /
HSP
WIRING
Fig3**

Initial Setup:

- 1. Attach the water meter's two (2) pulse wires (or three (3) pulse wires for Sensus Cordone/Omni/Prop/W-Turbo meters) Analog Pulse Kit terminals 1,2,3 (see above table for color-coding).**
- 2. (If Applicable) Connect the 4-20mA output signal to PLC/Controller: Terminals 4(+) and 5(-). Important Note! – The Analog Pulse Kit provides loop power. The user must not add an additional loop power supply, or else damage to the unit will result.**
- 3. (If Applicable) Connect the pulse output signal to the PLC/Controller: Terminals 6 and 7. Important Note! – The pulse output is a solid-state, dry-contact type. 500mA max, 60V max. Circuit must be current-limited by external means.**
- 4. (If Applicable) Connect the flow switch signal to the PLC/Controller: Terminals 8 and 9. Important Note! – The flow switch output is a solid-state, dry-contact type. 500mA max, 60V max. Circuit must be current-limited by external means.**
- 5. Set the DIP Switches, per Figure.1, and per Following Instructions:**

DIP Switches	Function
1-2	Set Registration Units to Match Target Flow Meter: <ul style="list-style-type: none"> • Gallons • Cubic Feet • Cubic Meters • Acre Feet
3-4	Set Sampling Window, Per Typical Pulse Input Frequency: <ul style="list-style-type: none"> • 5s – When Pulse Input Freq > 0.4 Hz • 10s – When Pulse Input Freq: 0.2-0.4 Hz • 30s – When Pulse Input Freq: 0.1-0.2 Hz • 60s – When Pulse Input Freq < 0.05 Hz
5	Set Pulse Output Speed: <ul style="list-style-type: none"> • Normal (Output Pulse Speed = Input Pulse Speed) • Slow (Output Pulse Speed Hz = Input Pulse Speed Hz / 10) Recommendation: Use Slow Speed if SCADA, Telemetry, BMS Incapable of Processing Normal Speed Pulses.
6	Enable/Disable Pulse Output Extension Mode: <ul style="list-style-type: none"> • Disable (Output Pulse Width = Input Pulse Width) • Enable (Output Pulse Width = Max(Input Pulse Width , 100 ms)) <p>(Enables 100ms De-Bounce Filter, if Sampling Window = 5s) (Enables 200ms De-Bounce Filter, if Sampling Window = 15s, 30s, or 60s)</p> <p>Recommendation 1: Enable Pulse Extension Mode If Pulse Width Too Short for Detection by SCADA, Telemetry, BMS System.</p> <p>Recommendation 2: Enable Pulse Extension Mode for Low-Frequency, Mechanical Contact Closure Inputs In Order to Activate De-Bounce Function.</p> <p>Note! – If Extended Pulse Width Mode Causes Output Pulses to Overlap, Then User May Also Set Pulse Output Speed to 'Slow'.</p> <p>Possible Examples:</p> <ul style="list-style-type: none"> • Badger Meter HR Default Pulse Width: 50ms • Metron-Farnier Innov8 Default Pulse Width: 50ms

7	Configure Digital Output Channel 2: <ul style="list-style-type: none"> Flow Switch Output (Contact Closure When Flow Rate > 0) 2nd Pulse Output (Mirrors 1st Pulse Output) 																										
8	Enable / Disable Simulation Mode: <ul style="list-style-type: none"> Enable (For Debugging Control Panel): <ul style="list-style-type: none"> 4-20mA Output = 12mA (50%) Fixed Pulse Output = 1 Hz Fixed Flow Switch Output = ON / Closed Disable (Run Mode): <ul style="list-style-type: none"> 4-20mA, Pulse, & Flow Switch Operate in Normal Run Mode 																										
9,10,11,12	Set the Input Pulse Weight: <table border="1" style="margin-left: 20px;"> <tr><td>x1</td><td>1 pulse per 1 unit</td></tr> <tr><td>x10</td><td>1 pulse per 10 units</td></tr> <tr><td>x100</td><td>1 pulse per 100 units</td></tr> <tr><td>x1000</td><td>1 pulse per 1000 units</td></tr> <tr><td>x0.1</td><td>1 pulse per 0.1 unit</td></tr> <tr><td>x0.01</td><td>1 pulse per 0.01 unit</td></tr> <tr><td>x0.001</td><td>1 pulse per 0.001 unit</td></tr> <tr><td>x0.0001</td><td>1 pulse per 0.0001 unit</td></tr> <tr><td>x0.00001</td><td>1 pulse per 0.00001 unit</td></tr> <tr><td>X1/60</td><td>1 pulse per 1/60 unit</td></tr> <tr><td>x1/6</td><td>1 pulse per 1/6 unit</td></tr> <tr><td>x10/6</td><td>1 pulse per 10/6 unit</td></tr> <tr><td>x100/6</td><td>1 pulse per 100/6 unit</td></tr> </table> <p>...where unit = gal/ft³/m³/AF</p>	x1	1 pulse per 1 unit	x10	1 pulse per 10 units	x100	1 pulse per 100 units	x1000	1 pulse per 1000 units	x0.1	1 pulse per 0.1 unit	x0.01	1 pulse per 0.01 unit	x0.001	1 pulse per 0.001 unit	x0.0001	1 pulse per 0.0001 unit	x0.00001	1 pulse per 0.00001 unit	X1/60	1 pulse per 1/60 unit	x1/6	1 pulse per 1/6 unit	x10/6	1 pulse per 10/6 unit	x100/6	1 pulse per 100/6 unit
x1	1 pulse per 1 unit																										
x10	1 pulse per 10 units																										
x100	1 pulse per 100 units																										
x1000	1 pulse per 1000 units																										
x0.1	1 pulse per 0.1 unit																										
x0.01	1 pulse per 0.01 unit																										
x0.001	1 pulse per 0.001 unit																										
x0.0001	1 pulse per 0.0001 unit																										
x0.00001	1 pulse per 0.00001 unit																										
X1/60	1 pulse per 1/60 unit																										
x1/6	1 pulse per 1/6 unit																										
x10/6	1 pulse per 10/6 unit																										
x100/6	1 pulse per 100/6 unit																										
13,14,15,16	Set the 20mA Flow Rate. (4mA Flow Rate Always Equals Zero Flow). If Meter Registration Units = gal, ft ³ , or AF Set 20mA Flow Rate in GPM (gallons per minute). If Meter Registration Units = m ³ Set 20mA Flow Rate in LPM (liters per minute).																										

6. Note the Following Behaviors of the Input Pulse De-Bounce Function and the Output Pulse-Extension Function:

Sample Period = 5 seconds...

	Pulse Extension = ON (Enables De-Bounce)	Pulse Extension = OFF (Disables De-Bounce)
Pulse Speed = SLOW (Disables De-Bounce)	Extension = 100ms De-Bounce = Disabled	Extension = Disabled De-Bounce = Disabled
Pulse Speed = NORMAL	Extension = 100ms De-Bounce = 100ms	Extension = Disabled De-Bounce = Disabled

Sample Period = 15, 30, 60 seconds...

	Pulse Extension = ON (Enables De-Bounce)	Pulse Extension = OFF (Disables De-Bounce)
Pulse Speed = SLOW (Disables De-Bounce)	Extension = 200ms De-Bounce = Disabled	Extension = Disabled De-Bounce = Disabled
Pulse Speed = NORMAL	Extension = 200ms De-Bounce = 200ms	Extension = Disabled De-Bounce = Disabled

7. Connect DC voltage source to the Analog Pulse Kit's V+/V- terminals. Apply Power, and Observe...

- The #1 LED (Green) 'Pulse Input' should blink ON whenever an incoming pulse (contact closure) has been detected.
- The #2 LED (Yellow) 'Heartbeat' should signal with an OCCASIONAL BLINK OFF, signifying that the Analog Pulse Kit is working.
- The #3 LED (Green) 'Flow Detect' will light up SOLID GREEN during periods when Positive Flow is Detected.
- The #4 LED (Yellow) 'Pulse Output' will follow the Pulse Output (LED ON=Contact Closure).

8. RESET PushButton Operation:

- If the RESET PushButton is depressed for 1 second (or more), then the Day Totalizer will be reset to ZERO (0).
- If the RESET PushButton is depressed for 5 seconds (or more), then the Day Totalizer and the Master Totalizers will both be reset to ZERO (0).

SENSUS WATER METERS - PERSONALITY SETTINGS FOR **CORDONEL-SERIES** METERS.

Recommended **DIP Switches 1-12:**


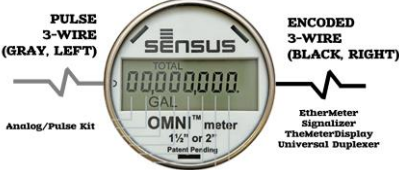


Size	Gallons	Cubic Feet	Cubic Meters
1.5" Cordonel 2" Cordonel Cordonel Should be Programmed to Emit: 1 pulse per 1.0 gallon 1 pulse per 0.1 ft ³ 1 pulse per 0.001 m ³	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10=ON DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.001 M ³ Low Speed Pulse: 1 Pulse / 0.01 M ³
3" Cordonel Cordonel Should be Programmed to Emit: 1 pulse per 1.0 gallon 1 pulse per 0.1 ft ³ 1 pulse per 0.01 m ³ If Cordonel totalizer is FT ³ , then meter should be set up for "extended mode".	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³
4" Cordonel Cordonel Should be Programmed to Emit: 1 pulse per 10 gallons 1 pulse per 0.1 ft ³ 1 pulse per 0.01 m ³ If Cordonel totalizer is FT ³ , then meter should be set up for "extended mode".	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³
6" Cordonel Cordonel Should be Programmed to Emit: 1 pulse per 10 gallons 1 pulse per 0.1 ft ³ 1 pulse per 0.01 m ³	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³
8" Cordonel 10" Cordonel 12" Cordonel Cordonel Should be Programmed to Emit: 1 pulse per 10 gallons 1 pulse per 0.1 ft ³ 1 pulse per 0.01 m ³	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³



**Sensus Cordonel
Ultrasonic Flow Meter**


SENSUS WATER METERS - PERSONALITY SETTINGS FOR **OMNI-SERIES** AND **HYDROVERSE** METERS.

Recommended **DIP Switches 1-12:**

Size	Gallons	Cubic Feet	Cubic Meters	
1.5" Omni-C2/T2/F2 2" Omni-C2/T2/F2 3" Omni-C2/T2/F2 Omni Meter Emits: 1 pulse per 1.0 gallon 1 pulse per 0.1 ft ³ 1 pulse per 0.01 m ³	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 1 Gal Low Speed Pulse: 1 Pulse / 10 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 FT ³ Low Speed Pulse: 1 Pulse / 1 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.01 M ³ Low Speed Pulse: 1 Pulse / 0.1 M ³	 <p>Sensus Omni-Series Flow Meter</p>  <p>PULSE 3-WIRE (GRAY, LEFT) ENCODED 3-WIRE (BLACK, RIGHT) Analog/Pulse Kit EtherMeter Signalizer TheMeterDisplay Universal Duplexer</p> <p>For Omni register, use gray (pulse) cable (left).</p>  <p>PULSE 3-WIRE (GRAY, LEFT) ENCODED 3-WIRE (GRAY, RIGHT) Analog/Pulse Kit EtherMeter Signalizer TheMeterDisplay Universal Duplexer</p> <p>For Omni-Plus register, use Gray (pulse) cable (left).</p>  <p>Sensus HydroVerse Magnetic Flow Meter</p>
4" Omni-C2/T2/F2 6" Omni-C2/T2/F2 8" Omni-C2/T2/F2 10" Omni-C2/T2/F2 Omni Meter Emits: 1 pulse per 10 gallons 1 pulse per 1 ft ³ 1 pulse per 0.1 m ³	DipSw.1= DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 10 Gal Low Speed Pulse: 1 Pulse / 100 Gal	DipSw.1=ON DipSw.2= DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11= DipSw.12= Normal Speed Pulse: 1 Pulse / 1 FT ³ Low Speed Pulse: 1 Pulse / 10 FT ³	DipSw.1= DipSw.2=ON DipSw.3=ON DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= Normal Speed Pulse: 1 Pulse / 0.1 M ³ Low Speed Pulse: 1 Pulse / 1 M ³	

SENSUS WATER METERS - PERSONALITY SETTINGS FOR **HET PROPELLER-SERIES** METERS.

Recommended **DIP Switches 1-12:**

Size	Gallons	Cubic Feet	
3" HET Gallon Meter Emits: 600 Pulses per 100 Gallons (1 Pulse per 1/6 Gallon) FT ³ Meter Emits: 600 Pulses per 10 FT ³ (1 Pulse per 1/60 FT ³)	DipSw.1= DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10=ON DipSw.11= DipSw.12=ON Normal Speed Pulse: 1 Pulse / (1/6) Gal Low Speed Pulse: 1 Pulse / (10/6) Gal	DipSw.1=ON DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10= DipSw.11= DipSw.12=ON Normal Speed Pulse: 1 Pulse / (1/60) FT ³ Low Speed Pulse: 1 Pulse / (1/6) FT ³	 <p>Sensus Propeller Meter With HET (Hall Effect Transmitter)</p>
4" - 10" HET Gallon Meter Emits: 600 Pulses per 1000 Gallons (1 Pulse per 10/6 Gallon) FT ³ Meter Emits: 600 Pulses per 100 FT ³ (1 Pulse per 1/6 FT ³)	DipSw.1= DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10=ON DipSw.11= DipSw.12=ON Normal Speed Pulse: 1 Pulse / (10/6) Gal Low Speed Pulse: 1 Pulse / (100/6) Gal	DipSw.1=ON DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10=ON DipSw.11= DipSw.12=ON Normal Speed Pulse: 1 Pulse / (1/6) FT ³ Low Speed Pulse: 1 Pulse / (10/6) FT ³	
12" - 22" HET Gallon Meter Emits: 60 Pulses per 1000 Gallons (1 Pulse per 100/6 Gallon) FT ³ Meter Emits: 60 Pulses per 100 FT ³ (1 Pulse per 10/6 FT ³)	DipSw.1= DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9= DipSw.10= DipSw.11=ON DipSw.12=ON Normal Speed Pulse: 1 Pulse / (100/6) Gal Low Speed Pulse: 1 Pulse / (1000/6) Gal	DipSw.1=ON DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8= DipSw.9=ON DipSw.10=ON DipSw.11= DipSw.12=ON Normal Speed Pulse: 1 Pulse / (10/6) FT ³ Low Speed Pulse: 1 Pulse / (100/6) FT ³	

SENSUS WATER METERS - PERSONALITY SETTINGS FOR **W-SERIES TURBO** METERS⁽¹⁾.

Recommended **DIP Switches 1-12:**


Size	Gallons	Cubic Feet	Cubic Meters
W-Series - All Sizes	DipSw.1= DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8=	DipSw.1=ON DipSw.2= DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8=	DipSw.1= DipSw.2=ON DipSw.3= DipSw.4= DipSw.5= DipSw.6= DipSw.7= DipSw.8=
1.5" W-120	DipSw.9= DipSw.10= DipSw.11= DipSw.12= 12.42 Pulses / Gal	DipSw.9= DipSw.10= DipSw.11= DipSw.12= TBD Pulses / FT ³	DipSw.9= DipSw.10= DipSw.11= DipSw.12= TBD Pulses / M ³
2" W-160	DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= 12.42 Pulses / Gal	DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= TBD Pulses / FT ³	DipSw.9=ON DipSw.10= DipSw.11= DipSw.12= TBD Pulses / M ³
3" W-350	DipSw.9= DipSw.10=ON DipSw.11= DipSw.12= 4.654 Pulses / Gal	DipSw.9= DipSw.10=ON DipSw.11= DipSw.12= TBD Pulses / FT ³	DipSw.9= DipSw.10=ON DipSw.11= DipSw.12= TBD Pulses / M ³
4" W-1000	DipSw.9=ON DipSw.10=ON DipSw.11= DipSw.12= 1.242 Pulses / Gal	DipSw.9=ON DipSw.10=ON DipSw.11= DipSw.12= TBD Pulses / FT ³	DipSw.9=ON DipSw.10=ON DipSw.11= DipSw.12= TBD Pulses / M ³
6" W-2000	DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= 0.501 Pulses / Gal	DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= TBD Pulses / FT ³	DipSw.9= DipSw.10= DipSw.11=ON DipSw.12= TBD Pulses / M ³
8" W-3500	DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= 0.2617 Pulses / Gal	DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= TBD Pulses / FT ³	DipSw.9=ON DipSw.10= DipSw.11=ON DipSw.12= TBD Pulses / M ³
10" W-5500	DipSw.9= DipSw.10=ON DipSw.11=ON DipSw.12= 0.1195 Pulses / Gal	DipSw.9= DipSw.10=ON DipSw.11=ON DipSw.12= TBD Pulses / FT ³	DipSw.9= DipSw.10=ON DipSw.11=ON DipSw.12= TBD Pulses / M ³
16" W-10,000	DipSw.9=ON DipSw.10=ON DipSw.11=ON DipSw.12= 0.1157 Pulses / Gal	DipSw.9=ON DipSw.10=ON DipSw.11=ON DipSw.12= TBD Pulses / FT ³	DipSw.9=ON DipSw.10=ON DipSw.11=ON DipSw.12= TBD Pulses / M ³




**Sensus W-Series
Turbo Meter
With
High-Speed-Pickup**

* All Pulse Weights are Approximate for W-Series Turbo Meters.

(1) Requires Setting of "W-Series Turbo Meter" Activation Jumper.
User Must Open Device Case, and Set Shunt Jumper on Circuit Board Utility Header:

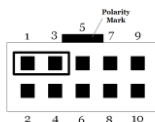

Activate Sensus W-Series Mode

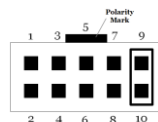


De-Activate Sensus W-Series Mode

SENSUS WATER METERS - PERSONALITY SETTINGS FOR CORDONEL, OMNI, HYDROVERSE, PROPELLER, & W-SERIES METERS.

Recommended **DIP Switches 13-16:**

The Following Are *Suggested* Flow Span Settings, and May Need to Be Adjusted Based on Anticipated Max Flow Conditions.

Size	Gallons , Cubic Feet , Cubic Meters	
1.5" Cordonel, Omni, HydroVerse, Prop, W-120 Turbo 200 gpm 750 lpm	DipSw.13=ON DipSw.14= DipSw.15=ON DipSw.16=	<p style="writing-mode: vertical-rl; transform: rotate(180deg);">4-20mA Span Settings Are Based Solely on Meter Size and Maximum Expected Flow Rates.</p> 
2" Cordonel, Omni, HydroVerse, Prop, W-160 Turbo 300 gpm 1200 lpm	DipSw.13= DipSw.14=ON DipSw.15=ON DipSw.16=	
3" Cordonel, Omni, HydroVerse, Prop, W-350 Turbo 500 gpm 2000 lpm	DipSw.13=ON DipSw.14=ON DipSw.15=ON DipSw.16=	
4" Cordonel, Omni, HydroVerse, Prop, W-1000 Turbo 1200 gpm 4500 lpm	DipSw.13=ON DipSw.14= DipSw.15= DipSw.16=ON	
6" Cordonel, Omni, HydroVerse, Prop, W-2000 Turbo 3000 gpm 11000 lpm	DipSw.13=ON DipSw.14=ON DipSw.15= DipSw.16=ON	
8" Cordonel, Omni, HydroVerse, Prop, W-3500 Turbo 4600 gpm 17500 lpm	DipSw.13= DipSw.14= DipSw.15=ON DipSw.16=ON	
10" Cordonel, Omni, HydroVerse, Prop, W-5500 Turbo 7300 gpm 27500 lpm	DipSw.13=ON DipSw.14= DipSw.15=ON DipSw.16=ON	
16" Cordonel, Prop, HydroVerse, W-10,000 Turbo 11,400 gpm 43000 lpm	DipSw.13= DipSw.14=ON DipSw.15=ON DipSw.16=ON	